



In this photo, a tape recorder was adapted for switch use using a Battery Interrupter and a Pal Pad. Make sure the tape recorder is in play mode. When the Pal Pad is touched, the tape player will play music.