

Recording Hints

- For recording on only one level, use **Level-1**.
- For recording on both levels, follow these instructions:
 1. Move the slide switch to the **Rec-1** position.
 2. Record message by pressing the top and hold while talking into the MIC. When finished, release the top. Repeat for additional messages.
 3. Do not play your **Level-1** messages. Go **immediately** to **Level-2** to record additional messages.
 4. After recording is finished, you can play your messages on either level.
 5. Messages will be lost if not recorded in this order.
- For the clearest recording possible, use an external switch to record your messages.